

ASSEMBLING INSTRUCTION

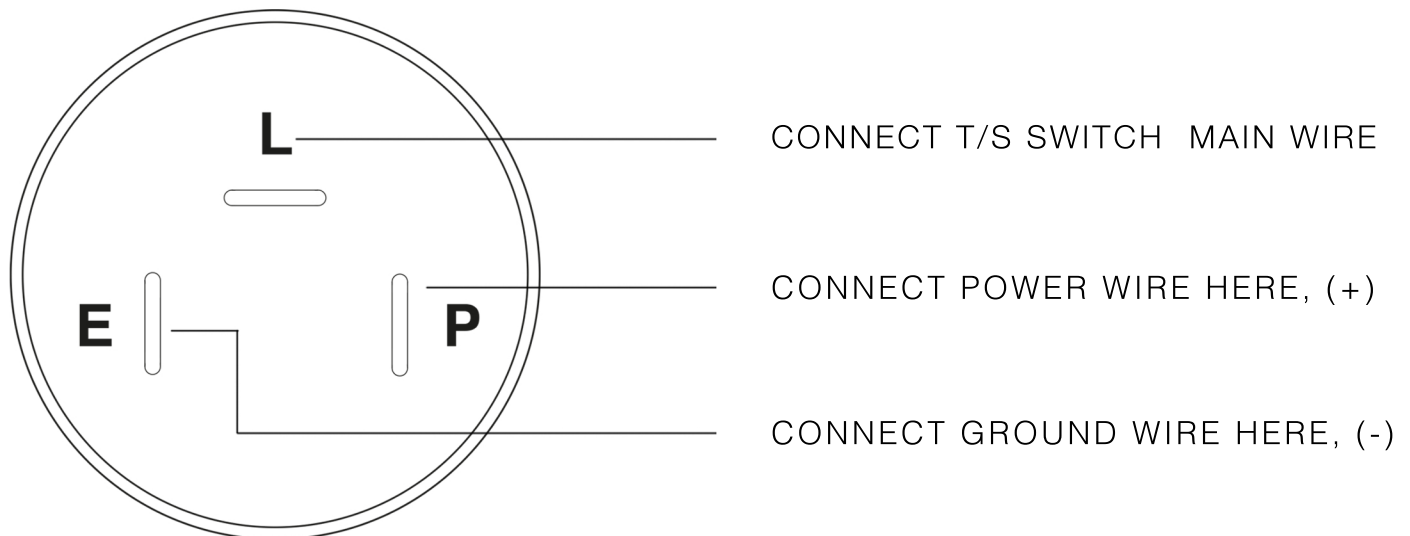
N1003-1

WWW.BARRACUDAMOTO.COM**LEGEND**

1. MAXIMUM OPERATING VOLTAGE: 16V
MASSIMA TENSIONE DI ESERCIZIO: 16V
TENSION DE FUNCIONAMIENTO MAXIMA: 16V
MAXIMALE BETRIEBSSPANNUNG: 16V
TENSION DE FONCTIONNEMENT MAXIMALE: 16V
2. MINIMUM OPERATING VOLTAGE: 8V
MINIMA TENSIONE DI ESERCIZIO: 8V
TENSÓN MÍNIMA DE FUNCIONAMIENTO: 8V
MINDEST BETRIEBSSPANNUNG: 8V
TENSION DE FONCTIONNEMENT MINIMUM: 8V
3. MAXIMUM OPERATING AMPERAGE: 15A
MASSIMA AMPERAGGIO OPERATIVO: 15A
AMPERAJE DE FUNCIONAMIENTO MAXIMO: 15A
MAXIMALE BETRIEBSLEISTUNG: 15A
AMPÉRAGE MAXIMAL DE FONCTIONNEMENT: 15A
4. MINIMUM OPERATING AMPERAGE: 0.1A
AMPERAGGIO DI FUNZIONAMENTO MINIMO: 0.1A
AMPERAJE DE FUNCIONAMIENTO MÍNIMO: 0.1A
MINDESTBETRIEBSDAUER : 0.1A
AMPÉRAGE OPÉRATIONNEL MINIMUM: 0.1A
5. SUITABLE FOR LIGHTS WITH LED'S OR INCANDESCENT BULBS
ADATTO A LUCI CON LAMPADINE LED O INCANDESCENTI
APTO PARA LUCES LED O CON BOMBILLAS INCANDESCENTES
FÜR LEUCHTEN MIT LED ODER GLÜHBIRNEN GEEIGNET
ADAPTÉ AUX LUMIÈRES AVEC AMPOULES À DEL OU À INCANDESCENCE

INSTALLATION ISTRUCTIONS

1. CONNECT GREEN WIRE TO GROUND "E" (-) IN FLASHER
2. CONNECT POWER WIRE TO "P" (+) IN FLASHER
3. CONNECT T/S MAIN WIRE TO "L" IN FLASHER

**WARNING**

1. DC 12-VOLT ONLY
2. IN CASE YOU ARE NOT FAMILIAR WITH WIRING
PLEASE CONSULT PROFESSIONALS IN YOUR AREA