

# **BlueBike Bluetooth adapter**

## **INSTALLATION AND USE**







Installing instructions \_

#### Part number: F27ADBTOOTH3

**Description:** Bluetooth interface for Rapid Bike modules.



#### Features

- □ Bluetooth v.4.0 BLE
- Bluetooth class 2 radio
- Built-in antenna
- Range: 10 meters line-of-sight



BlueBike adapter does **NOT** allow to program blank modules, changing bike model and upgrading the firmware (USB adapter **F27ADMUSB2** is mandatory for those operations).

WARNING:



 


Strin Lear

Installing instructions \_

#### 1. Installation

- 1.1. Turn ignition off.
- 1.2. Plug the white 4 pin female plug into the white 4 pin male plug of Rapid Bike harness marked as **USB**.



1.3. Connect the red wire to a switched 12V source using the provided posi-tap.

<u>**Do not**</u> connect the red wire directly to the positive side of the battery. The red wire on the black 3 pin plug of the Rapid Bike harness marked as **AUX IN** is a reliable 12V source.

1.4. Fasten the BlueBike adapter to the bike by means of the provided Velcro.

#### 2. Pairing

The following procedure must be performed the first time BlueBike has to be paired with a new Bluetooth device. After that, they connect automatically.

For further information follow the manufacturer's instructions for your device and operating system for pairing Bluetooth devices.

- 2.1. Turn ignition on.
- 2.2. Turn on Bluetooth feature on your Bluetooth device.

**TIP:** The Bluetooth menu is usually found in the Settings menu.

- 2.3. Select BlueBike adapter from the device list.
- 2.4. Enter the passkey if prompted.

**TIP:** Passkey can be found on a white stick closed to the white 4 pin female plug. It is same number of serial number.

**NOTE:** Devices with Bluetooth 3.0 and further may not prompt you for a passkey.



- 2.5. Bluetooth device will confirm once BlueBike adapter has been paired.
- 2.6. Turn ignition off.



Installing instructions \_



### 3. Connection to Rapid Bike Master software

- 3.1. Run Rapid Bike Master software.
- 3.2. Turn ignition ON.
- 3.3. Open menu *Connections*.
- 3.4. Select BlueBike connect.

After the first connection a button for Bluetooth connection appears in the toolbar



3.5. The information about Rapid Bike module appear at the bottom of software's screen meaning connection has been established.

