


MOUNTING PROCEDURE

KIT WINDSHIELD HONDA NC700 X HNC7300-X

KIT

- X1. SPECIFIC WINDSHIELD/SCREEN
- X4. ALUMINIUM THICKNESS
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. SCREW 5X30

WWW.BARRACUDAMOTO.COM

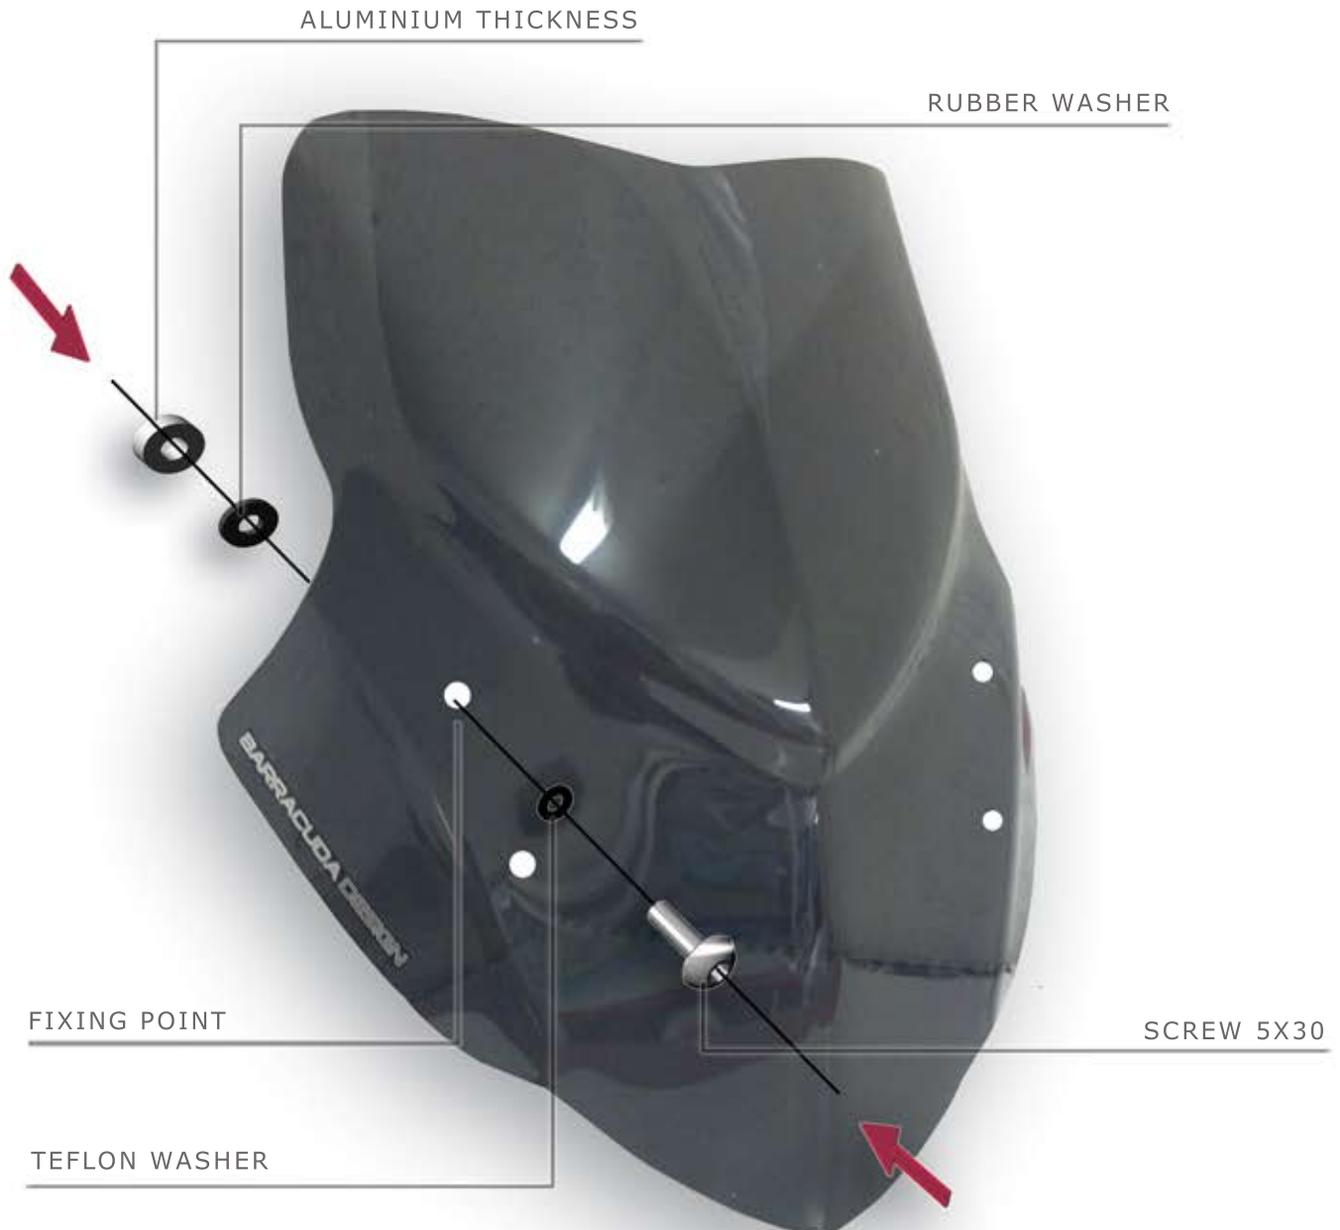

REMOVE 4 SCREWS OF ORIGINAL WINDSHIELD/SCREEN, MOUNT THE BARRACUDA SPECIFIC WINDSHIELD/SCREEN WITH HIS THICKNESS LIKE DESCRIBED UP.
INSTALL ALL THE SCREWS AND THAN LOCK; MAKE AN UNIFORM LOCKING ON ALL SCREWS

NOTE:
MAKE THE SAME PROCEDURE FOR ALL THE 4 FIXING POINT OF BARRACUDA WINDSHIELD/SCREEN