

**MOUNTING PROCEDURE****KIT WINDSHIELD  
YAMAHA XSR****YS7300**

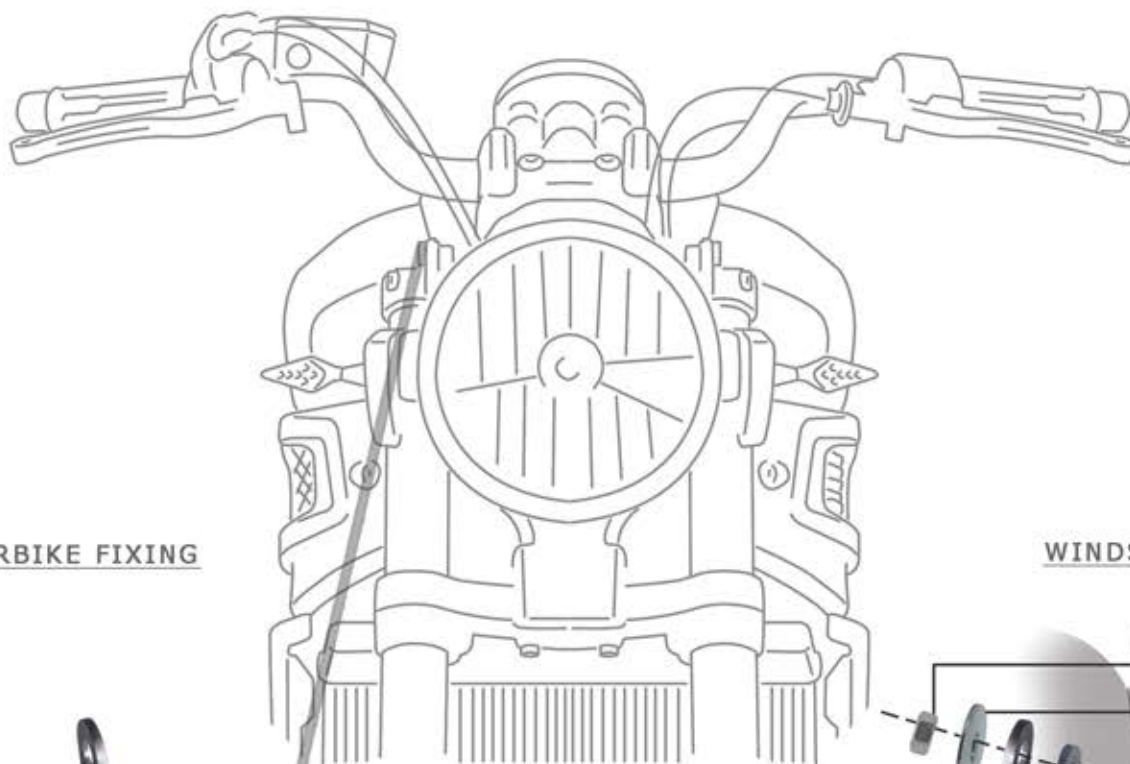
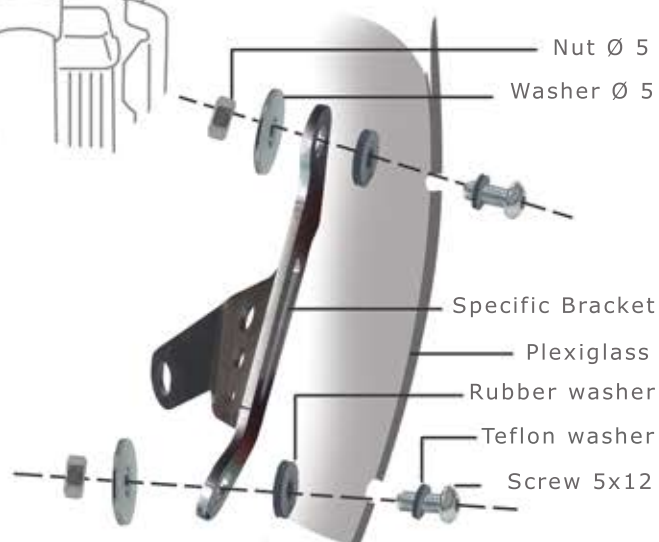
[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

**MOUNTING PROCEDURE:**

- REMOVE THE ORIGINAL SCREWS AND INSTALL THE WINDSHIELD BRACKET USING THE SCREWS 8X40 AND THICKNESS IN THE KIT;
- POSITION ALL AS THE SCHEME.
- FIND THE CORRECT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND LOCK ALL THE SCREWS.

**KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X2. THICKNESS
- X4. WASHER Ø 5 LARGE
- X4. AUTOLOCK NUT Ø 5
- X4. SCREW "ROUND HEAD" 5X12
- X2. SCREW "ROUND HEAD" 8X40
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER

**MOTORBIKE FIXING****WINDSHIELD FIXING**

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.