

MOUNTING PROCEDURE


KIT LICENCE PLATE
KAWASAKI Z 800 '13

KN8104-13

KIT

X1. SPECIFIC BRACKET
X2. SPACER LETTER "A"
X2. SPACER LETTER "B"
X2. SPACER LETTER "D"
X2. LARGE WASHER DIAMETER 6
X2. NUTS DIAMETER 6
X2. ROUND HEAD SCREW 6X40
X2. ROUND HEAD SCREW 6X30
X1. "X" LICENCE PLATE

WWW.BARRACUDAMOTO.COM

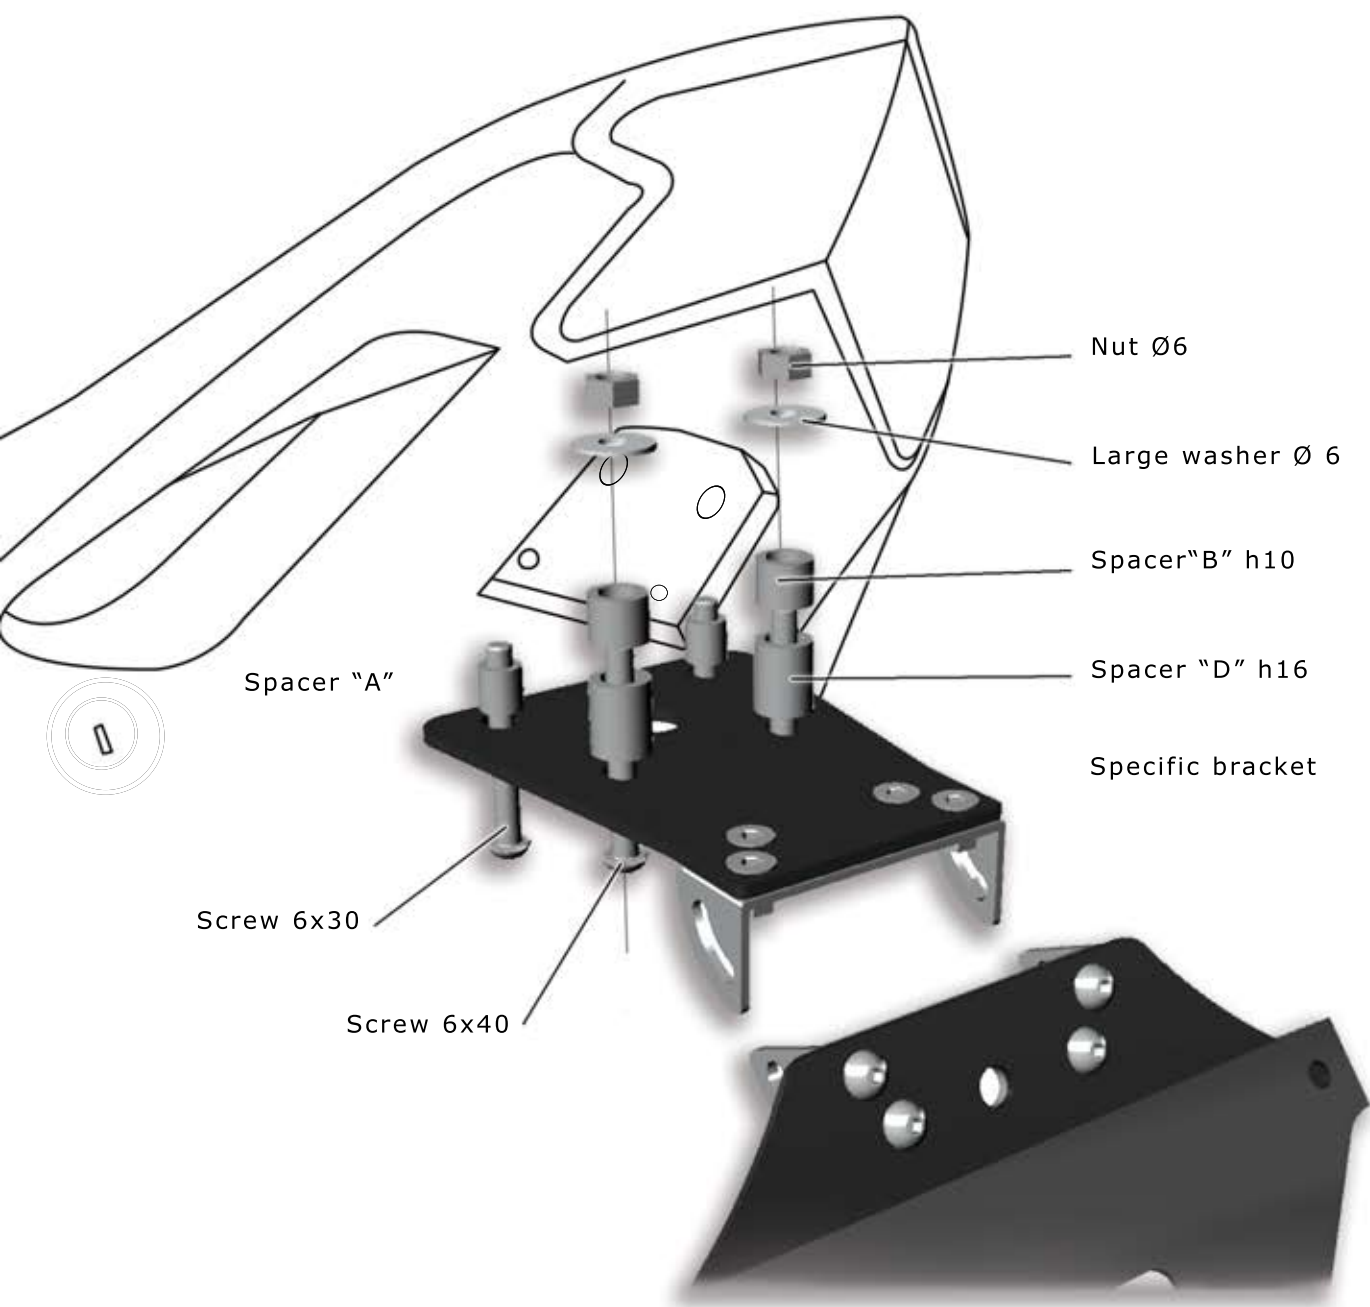

REMOVE THE ORIGINAL LICENCE PLATE. FIX THE BARRACUDA SPECIFIC BRACKET USING THE THICKNESS AND SCREWS INCLUDED LIKE SHOWN IN THE PICTURE.

RE-MOUNTING THE NUTS UNINSTALL BEFORE TO LOCK THE SPECIFIC BRACKET OF LICENCE PLATE.

WE ADVISE AN INCLINATION NOT EXCEEDING TO 30° TO AVOID SANCTIONS AND POSSIBLE DAMAGES.