

## MOUNTING PROCEDURE


### KIT SAVE CARTER TRIUMPH SPEED TRIPLE '05 - '10

**TS9101**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

## KIT

- X2. PVC HEAD
- X2. SAVE CARTER BASE
- X2. SPACER 20 MM HIGH
- X2. BRACKET
- X2. BOLT 10X50
- X1. BOLT 10X55
- X1. SCREW 12X65
- X2. NUT DIAMETER 10
- X2. NUT DIAMETER 12
- X1. WASHER Ø 10

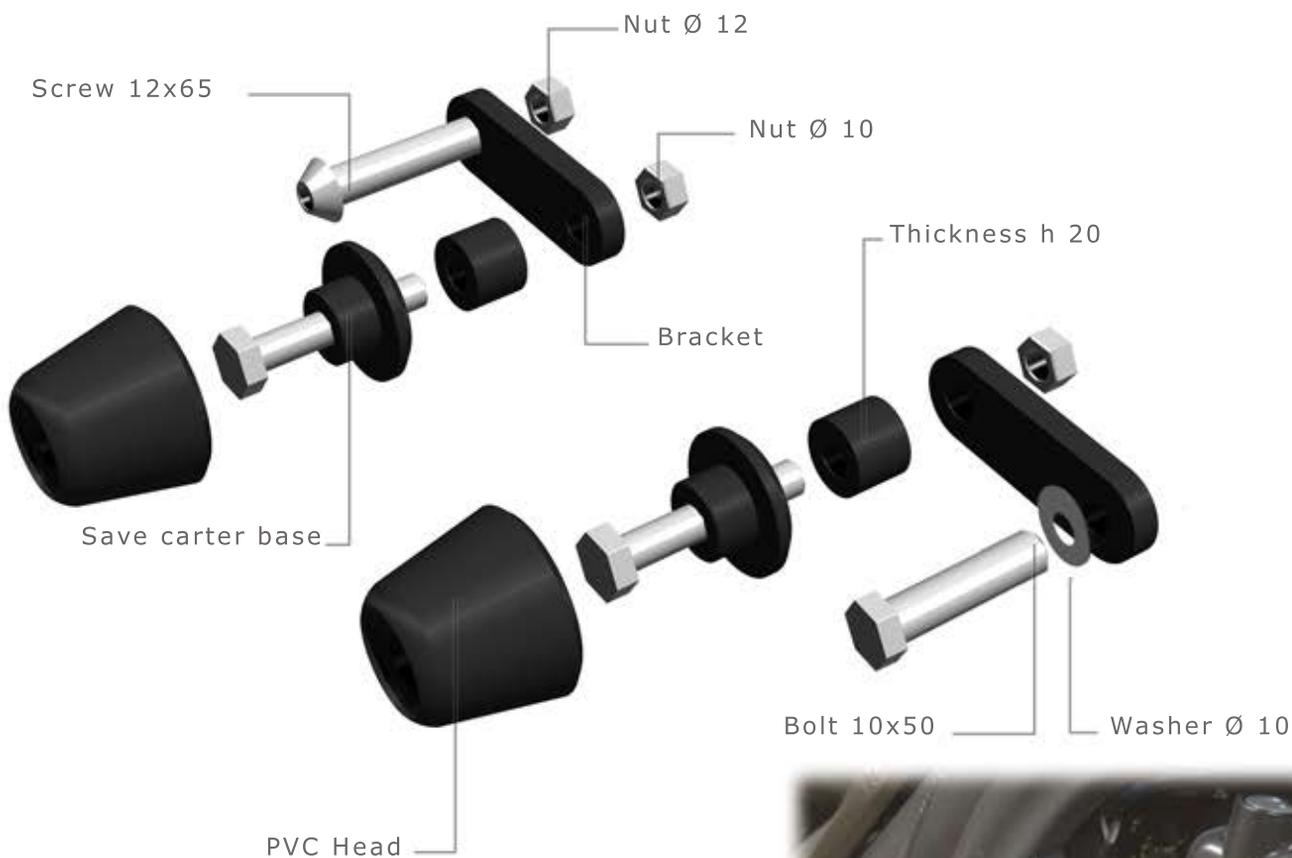

## ATTACK POINT ON CHASSIS



SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).  
FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY