

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

👁 Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

👁 Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	PI 110001	1
Sticker Öhlins	00192-01	2
Sticker Öhlins white	01185-01	2
Sticker Öhlins black	01185-04	2
Tool preload adjuster	03199-03	1
Owner's manual	07421-02	1
Bracket	60130-01	1
Bracket	60130-02	1
Screw M8x55	01046-27	2
Screw M10x60	64628-01	1
Washer	60426-01	1
Nut M8	00430-05	2
Nut M10	00430-01	1

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Rear Shock Absorber for Vespa Sprint 150

PI 702

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

1

Put the motorcycle on the center stand, so that the rear wheel barely touch the ground. Make sure the motorcycle is in a stable position.

2

Open the seat. Untighten the 5 screws and the fuel tank cap in order to remove the under-seat compartment.

3

Screw back the fuel tank cap (for your safety). Untighten the shock absorber top mounting nut.

👁 Note!

Do not drop / lose any component: it has to be re-installed on Öhlins shock absorber in the same order as it was on the standard shock absorber.


👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.


👉 Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.


1

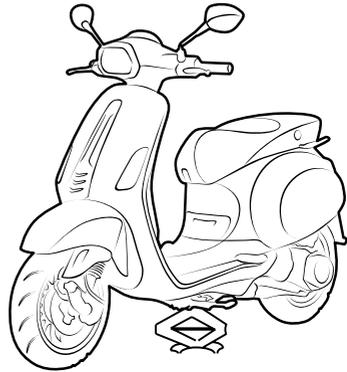

2

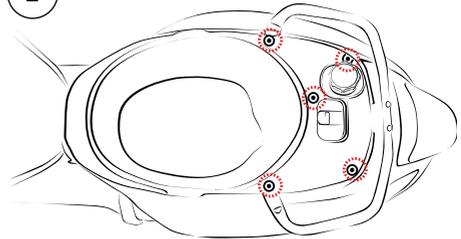


3

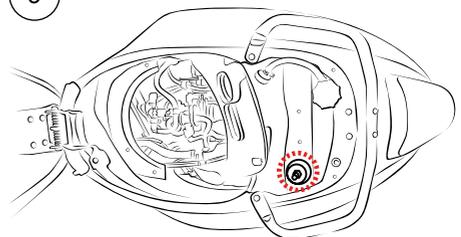

MOUNTING INSTRUCTIONS


4

Remove the standard shock absorber by untightening the 2 bracket mounting screws.

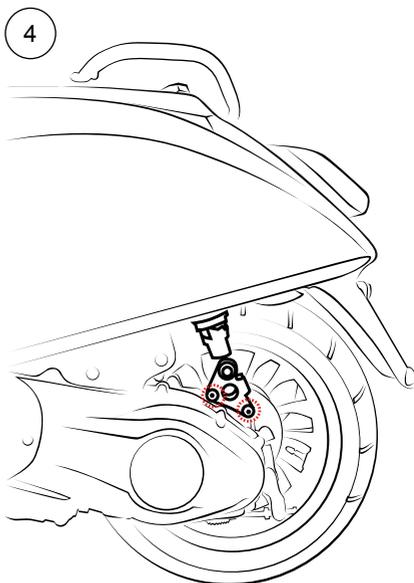

5

Install the Öhlins brackets and the Öhlins shock absorber, and reverse all the procedures.

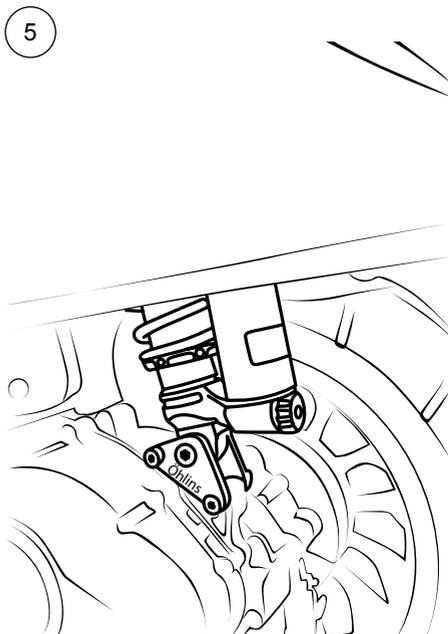


👁 Note!

Due to manufacturing tolerances of the plastic fairing it is necessary to check the clearance between the rear hugger and the shock absorber after assembling. If the clearance is less than 8mm it is necessary to trim the plastic edge of the rear hugger towards the shock absorber with a sharp knife.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

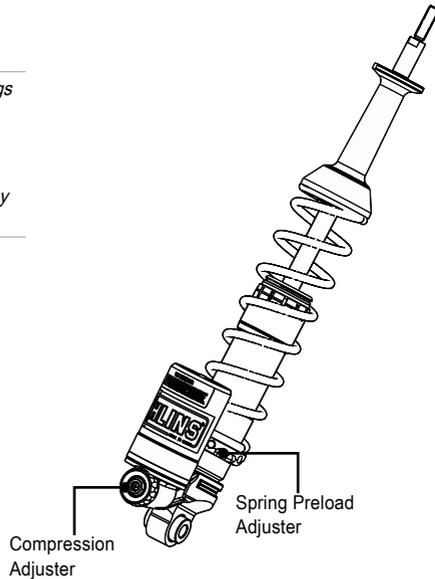

SET-UP DATA

Recommended set-up

Spring Preload 28mm
Compression Adjuster 10 clicks

Shock absorber data

Length 382 mm
Stroke 87 mm

Spring

Part No 60480-14
Free spring length 230 mm
Spring rate [20-23]N/mm
Preload adjustment range..... [0-43]mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_PI 702_TH_0
Issued 2018-02-05

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com