

## MOUNTING PROCEDURE

KIT WINDSHIELD  
HONDA NC700 S

**HNC7300-S**


WWW.BARRACUDAMOTO.COM

## KIT

- X1 SPECIFIC WINDSHIELD/SCREEN
- X2 SPECIFIC BRACKETS
- X4 TEFLON WASHER DIAMETER 5 MM
- X8 RUBBER WASHER
- X4 SCREW 5X12
- X4 SCREW 5X16

WINDSHIELD/SCREEN FIX

MOTORBIKE FIX

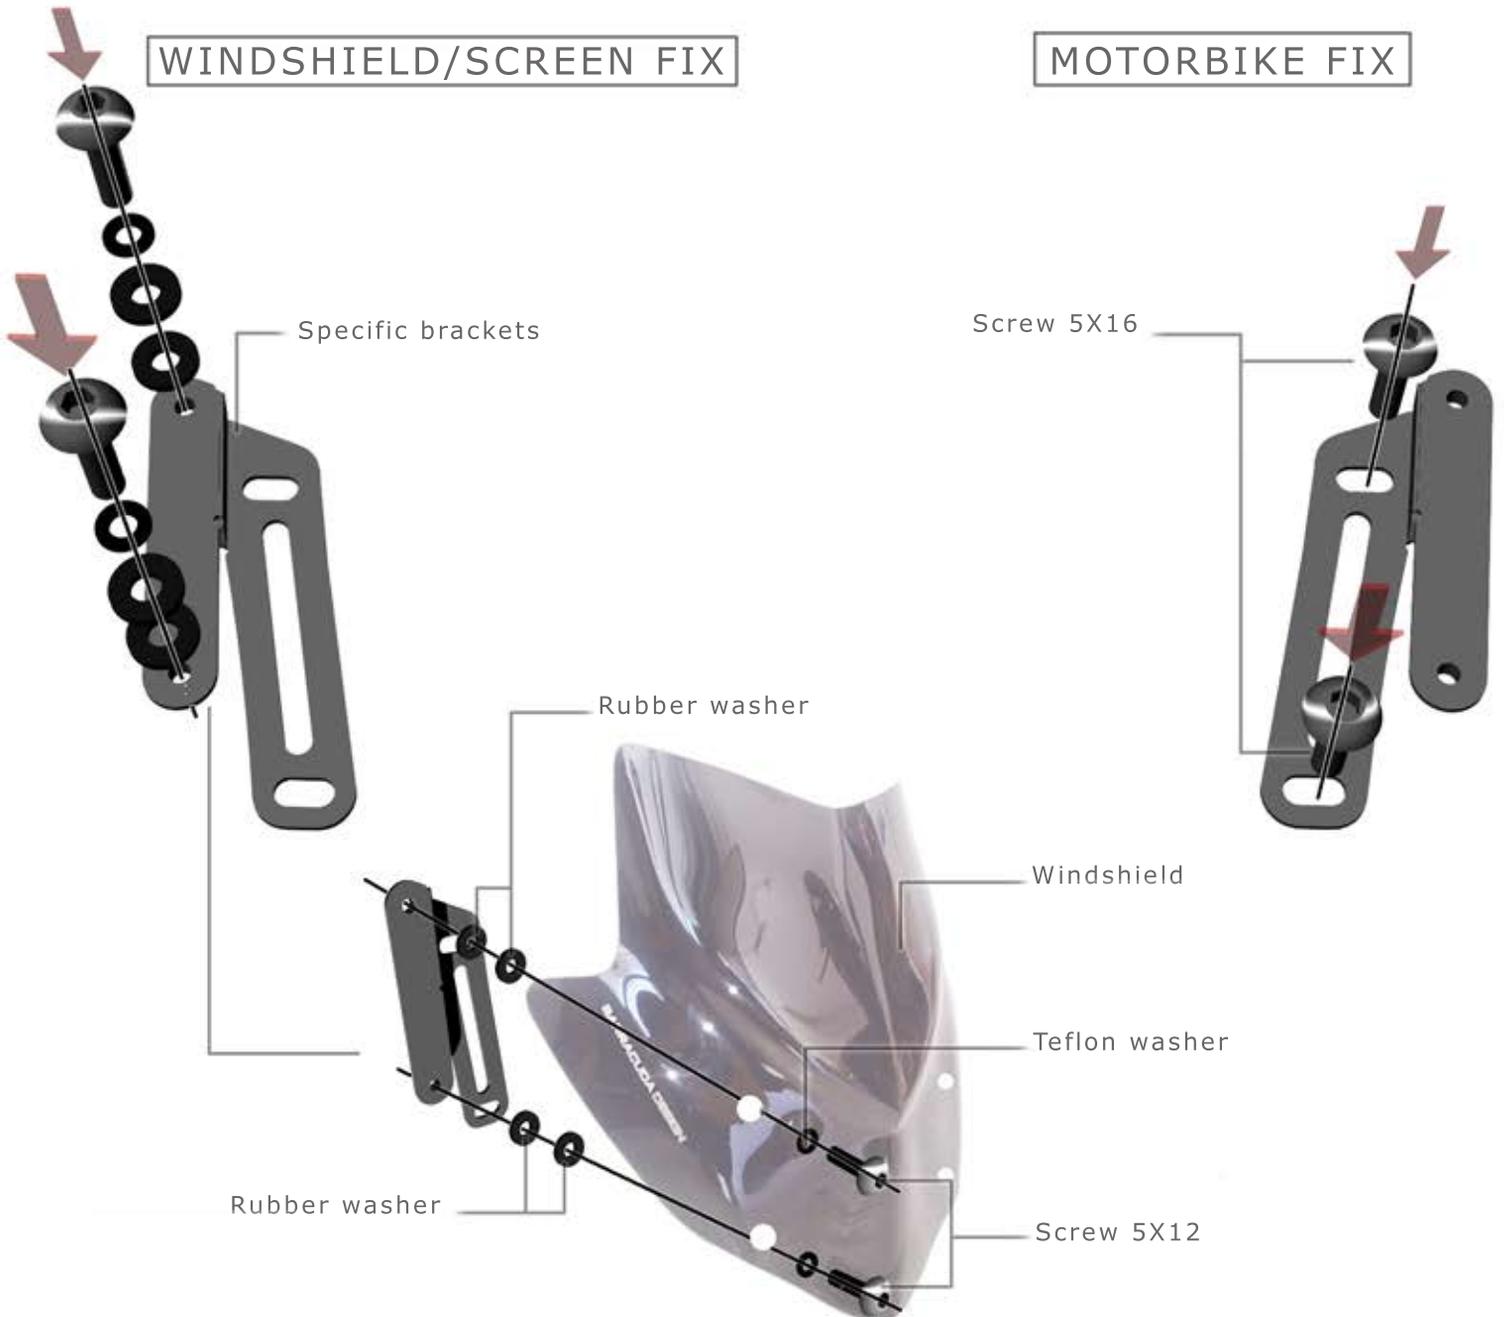

REMOVE THE ORIGINAL WINDSHIELD/SCREEN UNLOCKING THE 4 FIXING SCREWS, MOUNT THE SPECIFIC BRACKET WITH THE SCREWS LIKE DESCRIBED UP WITHOUT LOCKING TOO MUCH THE SCREWS, MOUNT THE WINDSHIELD/SCREEN ON THE BRACKETS USING THE RUBBER WASHERS, PUT THE WINDSHIELD/SCREEN IN THE CENTER MOVING INTO ALL DIRECTIONS, REMOVE THE WINDSHIELD/SCREEN AND LOCK THE POSITION OF THE BRACKET. MOUNT THE WINDSHIELD/SCREEN. DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS DAMAGES

NOTE: MAKE THE SAME PROCEDURE FOR ALL THE FOUR FIXING POINTS.