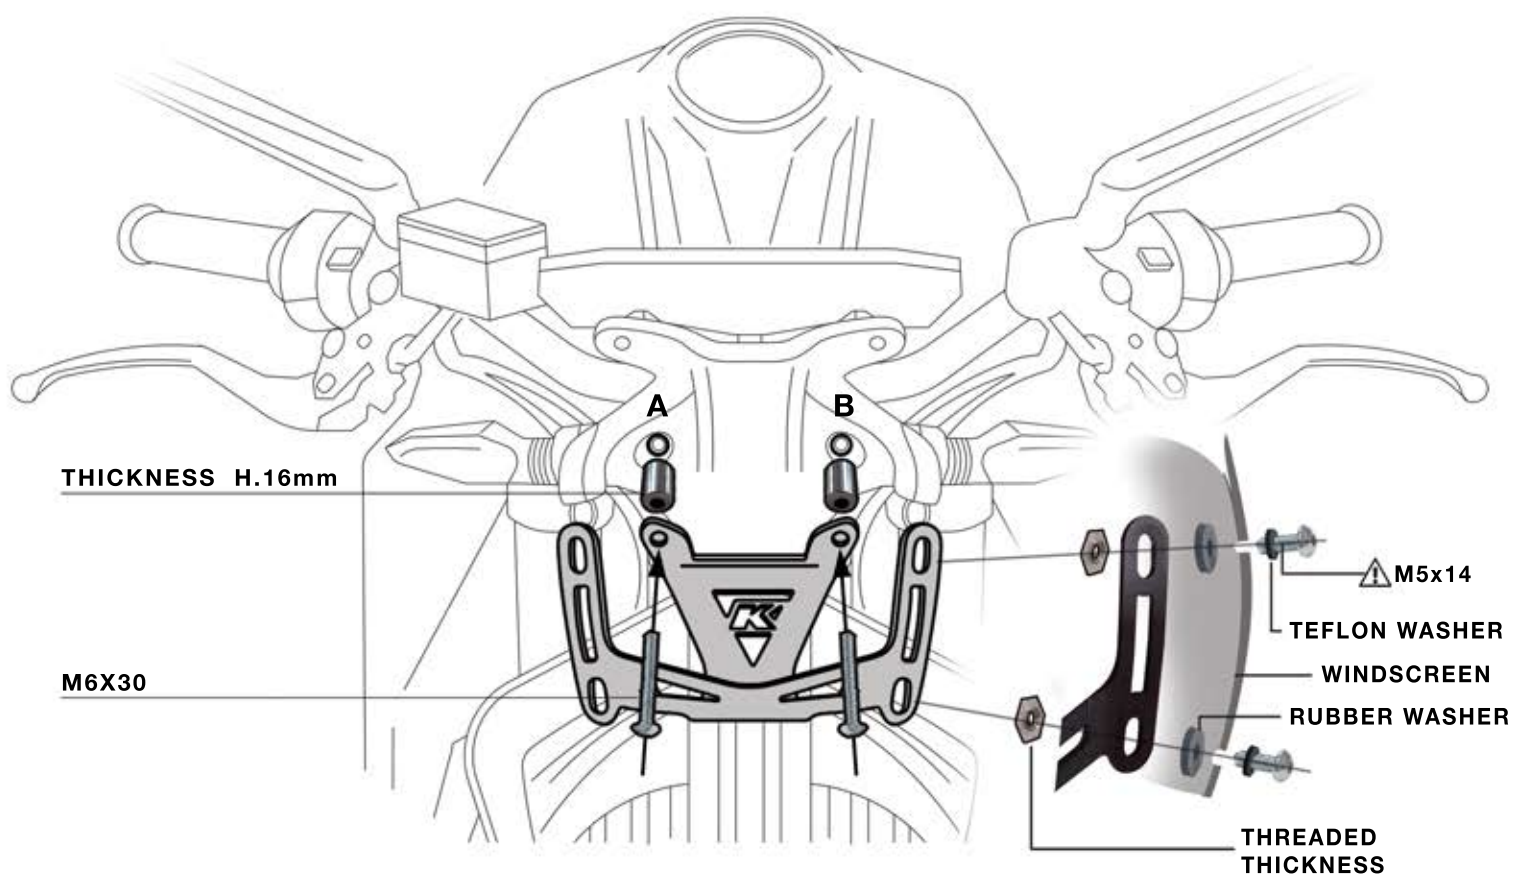


**ASSEMBLY INSTRUCTION****WINDSCREEN KIT  
KTM DUKE 390 2017****KTM 3300-17****WWW.BARRACUDAMOTO.COM****KIT**

X1. BRACKET KIT + DARK WINDSCREEN  
X2. THICKNESS h.16mm  
X4. M5X14  
X4. TEFLON WASHER Ø 5  
X4. RUBBER WASHER  
X4. THREADED THICKNESS  
X2. M6X30

**ASSEMBLY PROCEDURE :**

1. REMOVE THE ( A- B ) STOCK SCREWS FROM THE FRONTAL COVER, AS ILLUSTRATED.
2. MOUNT THE SPECIFIC BRACKET AND THE THREADED THICKNESS USING THE SUPPLIED M6X30, AS SHOWN.
3. FIND THE RIGHT POSITION OF THE WINDSCREEN ON THE SPECIFIC BRACKET.
4. TIGHTEN EVERYTHING.

**IMPORTANT: DON'T TIGHTEN TOO MUCH TO AVOID BRAKES ON THE WINDSCREEN**