

## ASSEMBLY INSTRUCTIONS

### WINDSCREEN KIT YAMAHA MT-07 2018

YMT7300-18



#### KIT

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKETS
- X4. SPECIAL BUSHINGS
- X4. ALLEN SCREWS M5X12
- X4. ALLEN SCREWS M6X30
- X4. TEFLON WASHERS Ø5
- X4. RUBBER WASHERS

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

#### ASSEMBLY PROCEDURE:

1. REMOVE THE ORIGINAL BOLTS AND FIT THE TWO SPECIFIC BRACKETS USING THE M6X30 SCREWS, AS SHOWN IN THE PICTURE.
2. POSITION THE PLEXIGLASS BY CENTERING IT ON THE SPECIFIC BRACKETS AND TIGHTEN THE BOLTS, AS SHOWN.

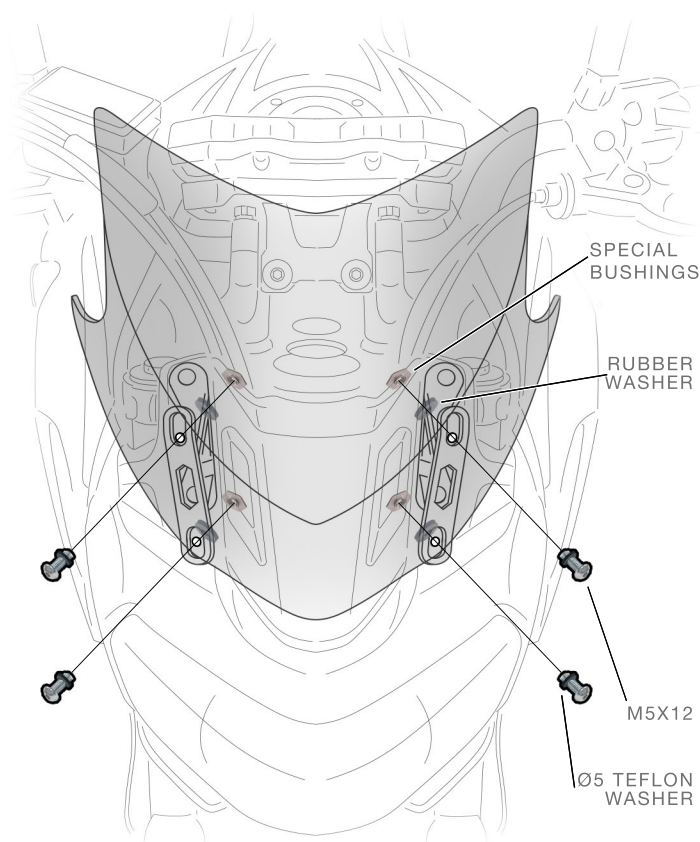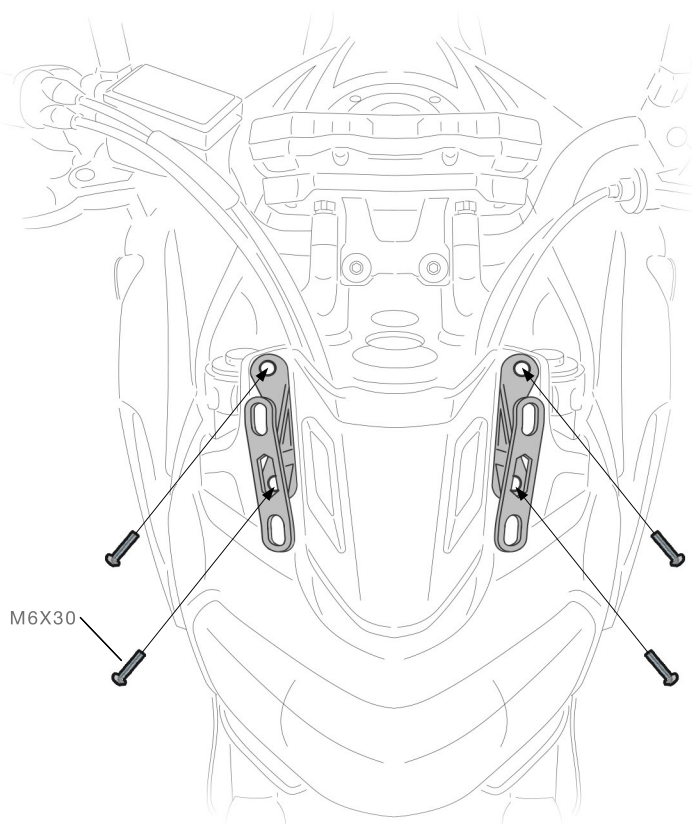

**IMPORTANT:** DO NOT TIGHTEN IN EXCESSIVE WAY TO AVOID BREAKAGE OF THE PLEXIGLASS.