


MOUNTING PROCEDURE**KIT SAVE CARTER
SUZUKI GSR 750****SG7101**WWW.BARRACUDAMOTO.COM**KIT**

X2. PVC HEAD
X2. SAVE CARTER BASE Ø 10
X2. THICKNESS H. 25MM
X2. SCREW 10X90

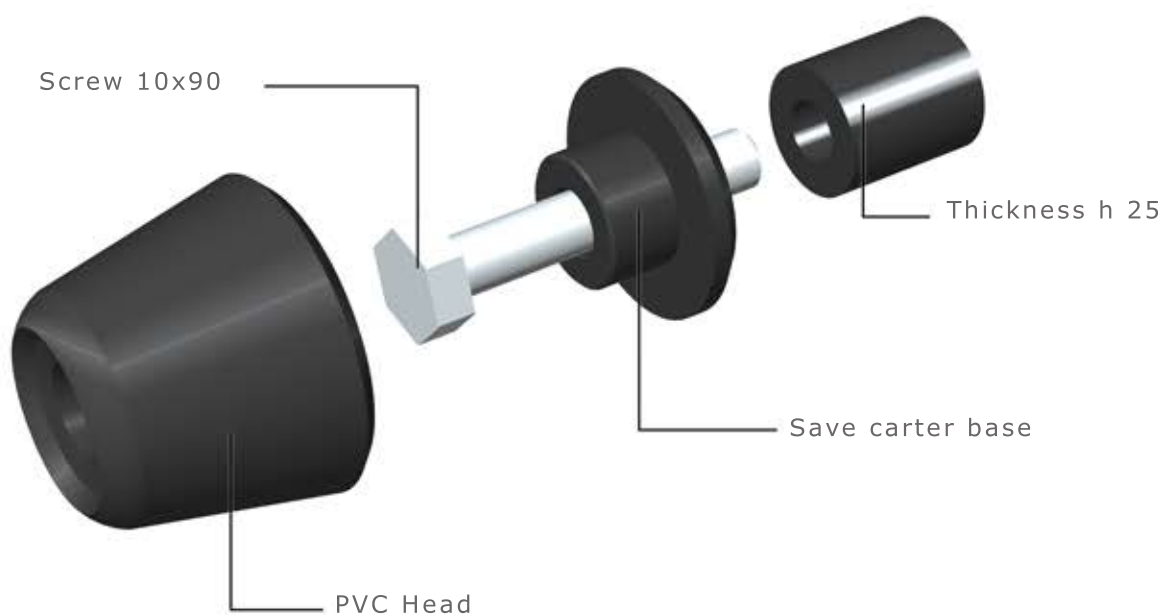

CHECK THE EXACT STEPS BEFORE MOUNTING FOR FIXING SO YOU HAVE THE RIGHT LEDGE FROM THE BIKE.



FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START THE MOUNTING PROCEDURE.
USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED INTO THE PICTURE TO OBTAIN THE RIGHT DISTANCE OF THE SAVE CARTER FROM THE MOTORBIKE.
FIX THE PVC HEAD OF SAVE CARTER ONLY AFTER FIX AND LOCK ALL THE KIT.