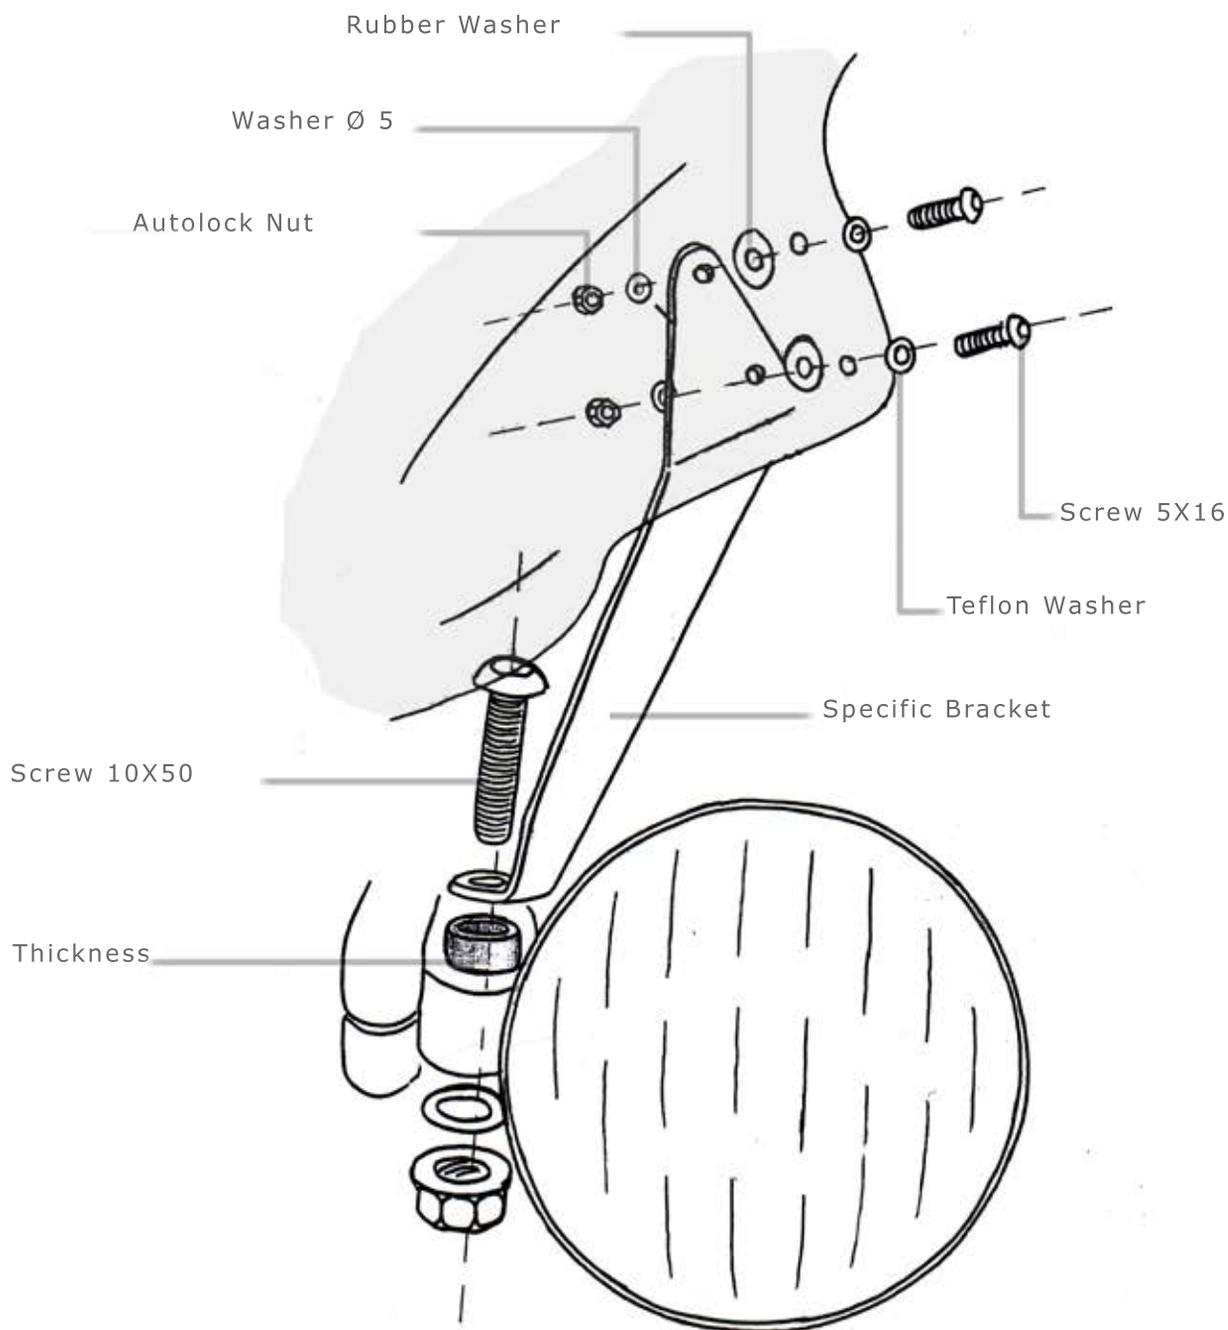


MOUNTING PROCEDURE**KIT WINDSHIELD
SPEED TRIPLE '05 - '10****TS9300****KIT**

- X2. BRACKET
- X2. "ROUND HEAD" SCREW 10X50
- X2. SPECIAL THICKNESS
- X4. "ROUNDHEAD" SCREW 5X16
- X4. TEFLON WASHER DIAMETER 5
- X4. WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. AUTOLOCK NUT DIAMETER 5
- X1. BARRACUDA WINDSHIELD/SCREEN

WWW.BARRACUDAMOTO.COM

MOUNT THE WINDSHIELD/SCREEN LIKE DESCRIBED IN THE PICTURE UP. APPLY THE STICKER SQUARE RUBBER INSIDE OF WINDSHIELD/SCREEN TO AVOID CONTACTS WITH THE INSTRUMENTATION