


MOUNTING PROCEDURE**KIT WINDSHIELD
KAWASAKI Z300****KN3300**WWW.BARRACUDAMOTO.COM**MOUNTING PROCEDURE:**

- REMOVE THE SCREWS HIGHLIGHTED AND INSTALL THE BARRACUDA WINDSHIELD BRACKET USING THE SCREWS IN THE KIT;
- PUT ALL IN POSITION LIKE THE SCHEME;
- FIND THE CORRECT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED E LOCK ALL THE SCREWS;

KIT

X1. PLEXIGLASS
X2. SPECIFIC BRACKET
X4. SCREW "ROUND HEAD" 5X12
X4. SCREW "ROUND HEAD" 5X30
X4. SPECIAL WASHER
X4. TEFLON WASHER Ø 5
X4. WASHER Ø 5 LARGE
X12. RUBBER WASHER

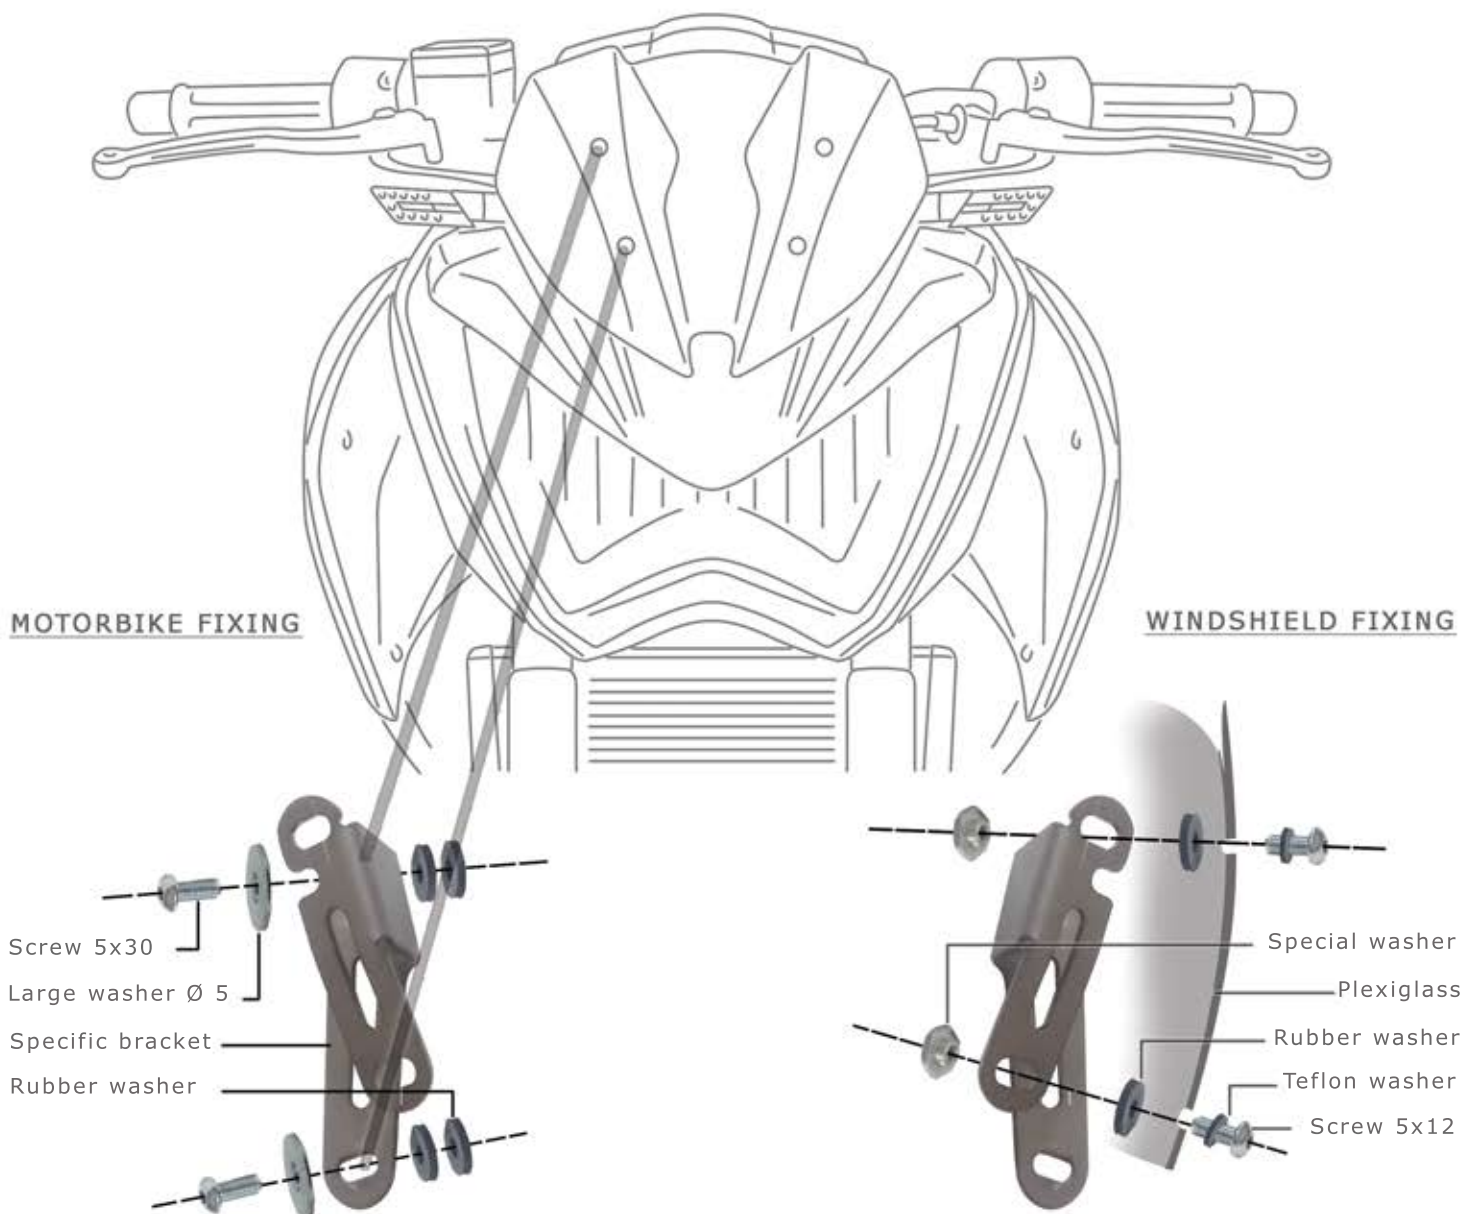

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.