

MOUNTING INSTRUCTIONS**CRASH PAD KIT
YAMAHA MT09 '17****YMT9101-17****WWW.BARRACUDAMOTO.COM****KIT**

X2. PVC HEAD KIT
X2. CRASH PAD BASE
X1. THICKNESS H.60 (LEFT SIDE)
X1. THICKNESS H.40 (RIGHT SIDE)
X1. BOLT 10X110X1.25 (RIGHT SIDE)
X1. BOLT 10X130X1.25 (LEFT SIDE)


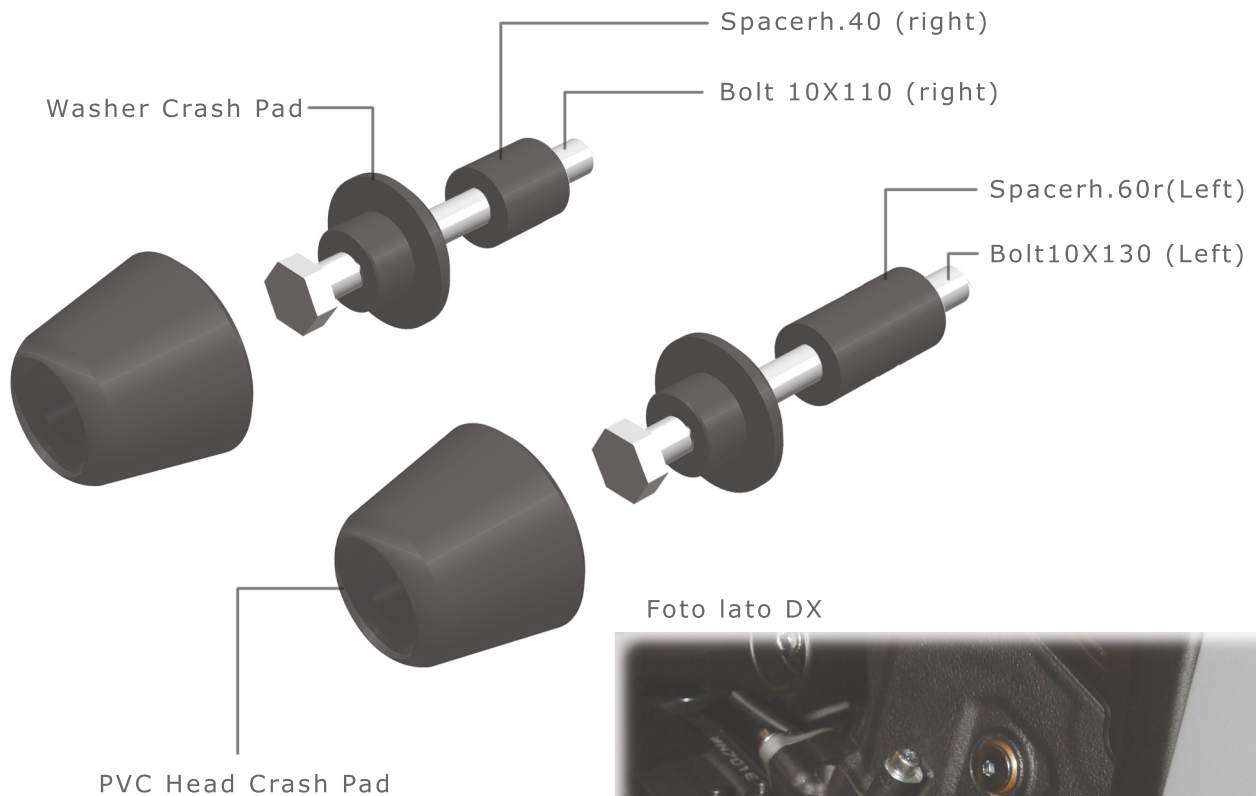


Foto lato DX

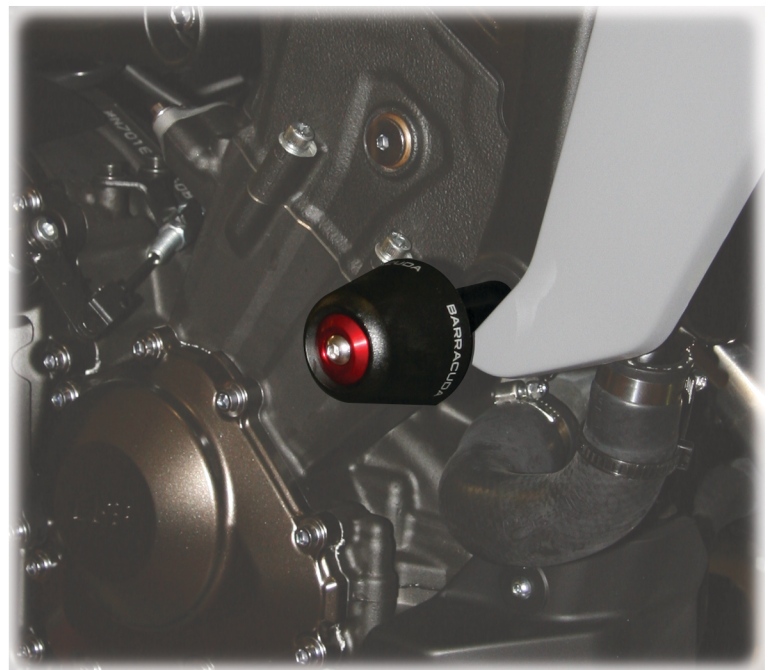

FIND THE FIXING POINT ON THE MOTORBIKE;

USE THE SPECIFIC THICKNESS AND BOLTS LIKE THE PICTURE TO OBTAIN THE RIGHT PROJECTION OF CRASH PAD FROM THE MOTORBIKE. MAKE THE OPERATION ONE SIDE FOR TIME.

FIX THE HEAD OF CRASH PAD IN PVC AFTER FIXED AND LOCKED ALL THE KIT ONLY.