

ASSEMBLY INSTRUCTION

WINDSCREEN KIT KTM DUKE 790 '18

KTM 7300-18

KIT


- X1. BRACKETS + WINDSCREEN KIT
- X2. SMALL BRACKET
- X2. LARGE BRACKET
- X2. M8X45 ALLEN SCREW
- X2. H13 THICKNESS
- X2. M6X14 ALLEN SCREW
- X2. Ø6 WASHER
- X2. SELF-LOCKING Ø6 DICE
- X4. M5X12 ALLEN SCREW
- X4. TEFLON WASHER
- X4. RUBBER WASHER
- X4. M LETTER THICKNESS

WWW.BARRACUDAMOTO.COM


ASSEMBLY PROCEDURE:

1. UNSCREW THE TWO UPPER BOLTS THAT FIX THE STEERING PLATE TO THE FORKS.
2. FIX THE TWO SMALL BRACKETS, USING THE H13 THICKNESSES AND THE M8X45 ALLEN SCREWS.
3. FIX THE LARGE BRACKETS ON THOSE PREVIOUSLY MOUNTED, USING THE M6X14 ALLEN SCREWS, Ø6 WASHERS AND Ø6 DICE, AS FROM PICTURE.
4. FIX THE WINDSCREEN TO THE BRACKETS, ASSEMBLING IT AS SHOWN.

BRACKETS ASSEMBLY

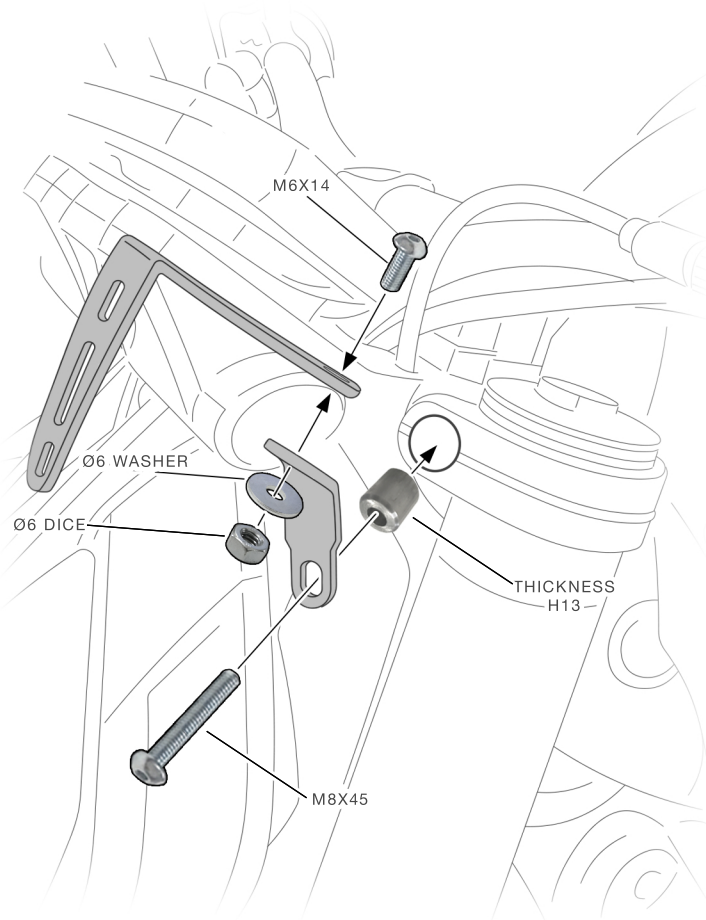

WINDSCREEN ASSEMBLY

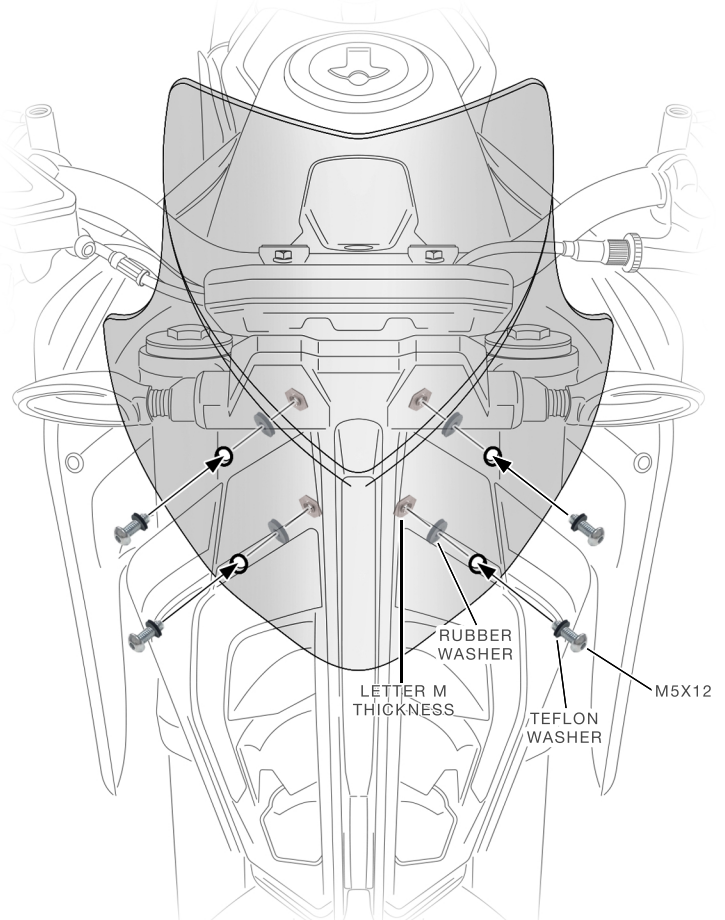

IMPORTANT: DO NOT TIGHTEN IN EXCESSIVE WAY TO AVOID BREAKAGE OF THE PLEXIGLASS.